SCCSID = wca out struc specs.man v1.1 02/15/03

Prepared by: Jenifer Barnes, Angela Montoya, Danielle Lyons

Date: 12/3/02

Hydrologic Systems Modeling Division

DRAFT DRAFT DRAFT DRAFT DRAFT DRAFT

SOUTH FLORIDA WATER MANAGEMENT MODEL V5.0 INPUT MAN PAGE FOR

wca_out_struc_specs.dat == Water Conservation Areas (WCAs) inflow/outflow structures definition data file (previously defined as caoflpts) (unit no. 21; read in wcas input data.F)

NOTE: The names assigned to all structures input in this file must appear in the

master list of structure names in model definition data file (previously known as lecdef*)

WCA=Water Conservation Area LEC=Lower East Coast SA=Service Area LECSA=Lower East Coast Service Area VAR NAME COLS

DESCRIPTION FORMAT

1. IDENTIFICATION OF WCAS-FORMAT (i5.10(2x.a5))

1-5 nwcas i5 number of WCAs
- wca_name(isa) 2x,a5 names of WCA #isa (isa = 1, nwcas)

2. INITIAL STAGE (FT. NGVD) FOR EACH WCA

rinit wca stage(isa) free initial stages(ft. NGVD) for WCA #isa (isa = 1,nwcas)

3. HYDROLOGIC BASIN NUMBER FOR EACH WCA ______

ibasin_no_wca(isa) free hydrologic basin numbers for

WCA #isa (isa=1,nwcas) (CBN of STATDTA file)

4. ORDER IN WHICH WCAS ARE SIMULATED-FORMAT (5x,5(a5,2x))

1-5 blank

5x blank space a5,2x order in which WCAs are simulated wca name order sim(isa) a5,2x (isa = 1, nwcas)

5. OPT	TION FOR RAIN-DRIVEN OPERATIONS F	OR EACH WCA-	FORMAT (5(a5,2x))
	wcaenv(isa)	a5,2x	option for rain-driven operations for WCA #isa - TRUE or FALSE (5 characters), if FALSE, calendar operational schedules are implemented in simulation (isa = 1, nwcas)
	IMUM THRESHOLD FOR MULTI SEASONA RATIONAL SCHEDULE OF EACH WCA	L FORECAST F	OR LOK INFLOW TO ALLOW A CHANGE IN THE
-	rmulti_seas_thres_chg_sched(isa)	free	minimum threshold for multi seasonal forecast for LOK inflow to allow a change in the operational schedule of WCA #isa (isa = 1, nwcas)
NOTE:	Set of records 7 Through 9 are		r each WCA, i.e., isa=1, nwcas
	ES AND FLOOR ELEVATIONS OF CONVE MAT(i5,10(2x,a5,2x,f6.2))		FOR SPECIFIC WCA
1-7 8-14	· · · · · · · · · · · · · · · · · · ·	i5,2x a5,2x	number of conveyance canals names of conveyance canals (character identifiers)
_	rmnstg(isa,i)	f6.2	floor elevations (ft. NGVD) for conveyance canal #i (i = 1, n_intcnl(isa))
8. DAY	S OF WEEK FOR DELIVERY FROM WCA		SPECIFIC WCA IS ABOVE FLOOR ELEVATION
-	no_of_days_wk_wcadel(isa,1)		number of days of the week for delivery from WCA #isa to SA1 when WCA #isa is above floor elevation
-	days_of_wk_wcadel(k)	free	name of days of the week for delivery from WCA #isa to SA1 wher WCA #isa is above floor elevation
-	frac_wcaws_del(isa,1)	free	<pre>(k=1, no_of_days_wk_wcadel(isa,1)) fraction of expected volumes to be delivered</pre>
9. DAY	S OF WEEK FOR DELIVERY FROM WCA	TO SA2 WHEN	SPECIFIC WCA IS ABOVE FLOOR ELEVATION
	no_of_days_wk_wcadel(isa,2)	free	number of days of the week for delivery from WCA #isa to SA2 when WCA #isa is above floor elevation
-	<pre>days_of_wk_wcadel(k)</pre>	free	days of the week for delivery

-	frac_wcaws_del(isa,2)	free	<pre>from WCA #isa to SA2 when WCA #isa is above floor elevation (k=1, no_of_days_wk_wcadel(isa,2)) fraction of expected volumes to be delivered</pre>
	AMES OF CONVEYANCE CANALS USED AS $ORMAT(5(a5,2x))$	TRIGGERS	FOR OUTFLOW FOR EACH WCA
-	iconvey_canal_no_wca_name(isa)	a5,2x	names of conveyance canals used as triggers for outflow for WCA #isa (isa = 1, nwcas) (NOCNL means no canal is used for appropriate WCA #isa)
AI			D STAGE MUST BE BELOW A THRESHOLD STAGE AT DELIVERY OF WATER FROM LOK TO HELP
-	min_consec_days_bel_strtstg	free	minimum number of consecutive days simulated stage must be below a threshold stage at any chosen location(s) in WCAS in order for delivery of water from LOK to help maintain canals in LECSAs to occur. (Input 1 if CANAL option for Minimum Flows and Levels Criteria is input)
NOTE:	Set of records 12 through 13 a	_	ed for each WCA, i.e., isa=1, nwcas
	UMBER OF MARSH TRIGGERS USED FOR nwcas records total)	MINIMUM FI	LOWS AND LEVELS CRITERIA FOR SPECIFIC WCA
	no_of_subareas_floor(isa)		number of marsh triggers used for Minimum Flows and Levels Criteria for WCA
			igger, i.e., i=1, no_of_subareas_floor(isa)
13. LO		ERS USED I	FOR MINIMUM FLOWS AND LEVELS CRITERIA FOR
1-6	avg_wca_subarea_stg_strt_count	(isa,i)	f6.2 threshold stage for starting the counter for number of consecutive days simulated stage is below
6-11	<pre>avg_wca_subarea_crit_stage(isa</pre>	,i)	f6.2 threshold stage for deliveries from LOK to meet LEC demands if

to user specified threshold (min consec days bel strtstq) avg wca subarea stg disc lok(isa,i) threshold stage that discontinues 12-17 f6.2 the deliveries from LOK to meet LEC demands 18-21 nmpts wca floor(isa,i) i3,1x number of marsh trigger points for determining deliveries of water from LOK to meet LEC demands The following three fields are repeated for each trigger point #j, NOTE: i.e., j=1, nmpts wca floor(isa,i) NOTE: Record 14 is repeated for each WCA, i.e., isa=1, nwcas ______ 13. CELL LOCATIONS USED TO TRIGGER REGULATORY RELEASES FROM SPECIFIC WCA WHEN IMPLEMENTING NON RAIN DRIVEN OPERATIONAL SCHEDULE n gage loc(isa) free number of cell locations used to trigger regulatory releases from WCA when implementing non rain-driven operational schedule NOTE: The following two fields are repeated for each cell #j, i.e., j=1, n gage loc(i) 15. NUMBER OF STRUCTURES SIMULATED IN WCAS WITH SPECIAL CODE FORMAT(i2, 2x, 40(a6, 1x)) ______ no_of_struc_spec_code i2,2x number of structures simulated in 1 - 4WCAs with special code - name_struc_w_spec_code_wca(i) a6,1x names of structure #i (i=1, no of struc spec code) (order can not be changed from the LECDEF file; structures can only be added at the end of the lecdef file)

counter is greater than or equal

NOTE: Set of records 16 Through 45 are repeated for each WCA, i.e., isa=1, nwcas The following records are used to compute available water from WCA to meet LEC demands.

16. I	NPUT DATA FOR SPECIFIC WO		
1-*	wcaid(isa)	a	name of WCA (max 5 characters)
NOTE:	Set of records 17 Throun_intcnl(isa)	ugh 18 are repeated for	each conveyance canal, i.e., i=1,
	PUT DATA FOR SPECIFIC CON RMAT(i5,2x,10(a5,1x)) (1		ED IN WCA
1-7	nclns(isa,i)	i5,2x	number of canals receiving water supply directly from WCA
-	cisacnl(j)	a5,1x	names of canal #j (j=1,nclns(isa,i))
	MBER OF INFLOW STRUCTURES RMAT(i5,2x,10(a6,1x)) (1		JPPLY DIRECTLY FROM WCA TO LECSA
1-7	nstrinf(isa,i)	i5,2x	number of inlet structures for WCA contributing water directly to water supply for LECSA
8-14	<pre>cistrindx(j)</pre>	a6,1x	name of inlet structure #j (j=1, nstrinf(isa,i))
19. GE	NERAL INFORMATION FOR SPI	CIFIC WCA OUTFLOW STRU	JCTURES
_	nstrpt(isa)	free	number of outflow structures simulated for WCA
20. PR	IORITY OPTION FOR MEETING	G WATER SUPPLY NEEDS IN	N LECSA
_	iprorte(isa)	free	priority option for meeting water supply needs in LECSA (1 - priority equal adversity, 0 - priority in order structures are simulated)
	NIMUM CONVEYANCE CANAL ST FSET (FT) THAT CAN BE LOW		FOR REGULATORY RELEASES AND MAXIMUM RELEASES
_	stgmnrg(isa)	free	minimum conveyance canal stage (ft NGVD) that is allowed for regulatory releases (non rain driven operations only)
-	regcoffset(isa)	free	maximum offset (ft) from regulation schedule that conveyance canal can be lowered

NOTE: Set of records 22 through 45 are repeated for each outflow structure simulated for specific WCA, i.e., is=1, nstrpt(isa)

22.	SPECIFIC	INFORMATION	FOR	SPECIFIC	WCA	OUTFLOW	STRUCTURES
	FORMAT(a6	5,2(2x,a3),2x	k,il	,2x,f5.1,2	2i3)		

1-6	struc_name_sim_wca(is,isa)	a6	character id of structure (max 6 characters)
7-11	icode_s(is,isa)	2x,a3	type of code used to simulate structure (GEN - general code common to simulated structures, SPC - code is unique to structure)
12-16	sim_opt(is,isa)	2x,a3	option in operation of structure (ENV - rain-driven operations, REG - calendar based operational schedule)
17-19	<pre>iopt_for_reg_releases(is,isa)</pre>	2x,i1	option to send regulatory releases (REG option above) OR excess water for rain-driven operations (ENV option above)
20-26	rmulti_seas_thres_struc(is,isa	2x,f5.1	threshold (million acre-ft) of multi-seasonal outlook for regulatory releases (used for REG option only)
27-29	<pre>iwca_reg_zone(is,isa)</pre>	i3	zone index for lowest zone allowed for regulatory releases
30-32	<pre>iopt_for_lokreg_flwth(is,isa)</pre>	i3	option to route regulatory releases from LOK through WCA to LEC when WCA is below schedule (1-yes, 0-not active)

NOTE: This record is read in only if general code is used to simulate operations of specific outflow structure, i.e., icode s(is,isa) = GEN

23. NAME OF COMPONENTS OF STRUCTURE FLOW TO BE OUTPUT IN STR2X2.DSS FILE, OFFSET TO REGULATION SCHEDULE WHEN GATES OPEN FULL FOR REGULATORY RELEASES, AND CELL LOCATIONS IMMEDIATELY UPSTREAM AND DOWNSTREAM OF STRUCTURE FORMAT(3(a6,2x),f6.1,4i5)

	(- (
1-8	sname_env_dss(is,isa)	a6,2x	name of component of structure flow for environmental releases
9-16	<pre>sname_reg_dss(is,isa)</pre>	a6,2x	to be output in str2x2.dss file name of component of structure flow for regulatory releases to
17-24	sname_ws_dss(is,isa)	a6,2x	be output in str2x2.dss file name of component of structure

25-30	offset_reg(is,isa)	f6.1	flow for water supply releases to be output in str2x2.dss file offset to regulation schedule when gates open fully for regulatory releases (non
31-35	<pre>icolposup_wcaot(is,isa)</pre>	i5	rain-driven operations only) column number immediately upstream of structure
36-40	<pre>irowposup_wcaot(is,isa)</pre>	i5	row number immediately upstream of structure
40-44	<pre>icolposdn_wcaot(is,isa)</pre>	i5	column number immediately downstream of structure
44-48	<pre>irowposdn_wcaot(is,isa)</pre>	i5	row number immediately downstream of structure
24. OPT	FION FOR HEADWATER		
-	ihwopt(is,isa)	free	option for headwater (0 - headwater is a canal, otherwise is a grid cell)
NOTE:	This record is read in only if i.e., ihwopt(is,isa) = 0	the headwater of	the structure is a canal,
	FREAM CANAL NAME MAT(a5)		
1-5	iup_canal_name(is)	a5	upstream canal name (max 5 characters) if option for headwater is 0
NOTE:	This record is read in only if i.e., ihwopt(is,isa)	the headwater of	the structure is a grid cell,
26. UPST	FREAM CELL LOCATION		
	ixhw(is,isa) iyhw(is,isa)	free free	column number of cell row number of cell
27. OPT	ION FOR TAILWATER		
-	itwopt(is,isa)	free	option for tailwater (0 - tailwater is a canal, otherwise is a grid cell)
NOTE:	This record is read in only if i.e., itwopt(is,isa) = 0	the headwater of	the structure is a canal,

	STREAM CANAL NAME RMAT(a5) (1 record total)		
	idn_canal_name(is)	a5	downstream canal name (max 5 characters) if option for tailwater is 0
NOTE:	This record is read in only if i.e., itwopt(is,isa) /= 0	the headwater of	the structure is a grid cell,
29. UPS	STREAM CELL LOCATION		
1-5 6-10	ixtw(is,isa) iytw(is,isa)	i5 i5	column number of cell row number of cell
30. LEC	CSA SERVED BY STRUCTURE		
-	iserv_area_indx(is,isa) ieaa_conduit_name	free	LECSA served by structure (1-SA1, 2-SA2, 3-SA3) name of EAA conduit used to bring runoff/LOK water directly or indirectly to structure (max 5 characters)
31. DIS	SCHARGE COEFFICIENT AND EXPONENT	USED IN DISCHARG	E EQUATION
-	dcoeff(is,isa)	free	discharge coefficient (-901 input if data not needed)
_	<pre>power(is,isa)</pre>	free	exponent used in discharge equation
32. OPT	TION FOR TRIGGER TO CONSTRAIN DIS	CHARGES THROUGH	STRUCTURES
-	iopt_for_tw_constraint(is,isa)	free	option for trigger to constrain discharges through structures (1 - cell trigger discharges through structure, otherwise, canal trigger discharges through structure)
NOTE:	This record is read in only if i.e., iopt_for_tw_constraint(is		ischarges through structures,
33. TRI	GGER CELL LOCATION AND MAXIMUM A	LLOWABLE STAGE F	OR OUTFLOW
-	n_cells_c(is,isa)	free	number of trigger cells

NOTE: The following two fields are repeated for each grid cell #kk,

	<pre>i.e., kk=1,n_cells_c(is,isa)</pre>		
_	<pre>icol_constrnt(kk)</pre>	free	column number for trigger cell #klif option in previous record is 1
_	<pre>irow_constrnt(kk)</pre>	free	row number for trigger cell #kk if option in previous record is 1
_	dnstrm_wca_name	free	name of downstream WCA which will be used as tailwater constraint for outflow through structure if option in previous record is 1
NOTE:	This record is read in only if i.e., iopt_for_tw_constraint(is i.e., struc_name_sim_wca(is,isa	s,isa)/=1 and the	
	IGGER CANAL STAGE (ASSUMED TO BE LOWED FOR OUTFLOW	THE TAILWATER)	AND MAXIMUM DOWNSTREAM STAGE
_		free	number of downstream triggers for limiting outflow
_	rmxstge(is,isa,ij)	free	maximum downstream stage (ft NGVD) allowed for outflow (999 means no maximum stage is used) defined for trigger #ij (ij=1,no_of_ds_stg_lmits)
NOTE:	This record is read in only if i.e., iopt_for_tw_constraint(is i.e., struc_name_sim_wca(is,isa	s,isa)/=1 and the	
	IGGER CANAL STAGE (ASSUMED TO BE AGE FOR OUTFLOW	THE TAILWATER)	AND MAXIMUM ALLOWABLE DOWNSTREAM
	rmxstge(is,isa,1)	free	maximum downstream stage(ft NGVD) allowed for outflow (999 means no maximum stage is used)
	SIGN CAPACITY (CFS) OF STRUCTURE RMAT(1x,2f6.0,i4)		
1-7	desgncp(is,isa)	1x,f6.0	design capacity (cfs) of structure

f6.0

multiplier for the structure capacity (1.0 - use present

capacity , > 1.0 - if proposed capacity is greater than present capacity, < 1.0 - if proposed capacity is less than present

8-13

capfact(is,isa)

14-17	<pre>iopt_lim_des_cap_wca(is,isa)</pre>	i4	capacity) option to limit outflow to design capacity (1-yes,0-no)
37. BREA	AKPOINTS IN STAGE USED IN SIMULA	TED OPERATION OF	STRUCTURE
_	nbpt(is,isa)	free	number of breakpoints in stage used in simulated operation of structure
-	stgbpt_s(is,isa,ibpt)	free	<pre>stage for breakpoint #ibpt in ft NGVD (ibpt=1,nbpt(is,isa))</pre>
	ES OF CANALS IMMEDIATELY DOWNSTR JCTURE-FORMAT(i5,5(2x,a5))	EAM RECEIVING WA	TER SUPPLY DISCHARGES FROM
1-5	no_dsws_canal(is,isa)	i 5	number of canals immediately downstream receiving water supply discharges from structure
6-12	<pre>dsws_canal_name(i)</pre>	2x,a5	names of the canal #i (i=1,no_dsws_canal(is,isa)) (maximum of 5 characters)
	E OF RESERVOIR THAT COULD LIMIT MAT(4x,a6)	DISCHARGE FROM S	TRUCTURE
1-10	down_res_name	4x,a6	name of reservoir (maximum of 6 characters) that could limit discharge from structure (NORES means no reservoir is used for appropriate structure)
	E OF UPSTREAM TARGET AREA FOR ENMAT(4x,a5) (1 record total)	VIRONMENTAL (RAI	N DRIVEN) OPERATIONS
1-9	up_targ_name	4x,a5	name of upstream target area (Maximum of 5 characters) for environmental (rain driven) operations (NOTRG means no stage target is used)
	OF ENVIRONMENTAL (PRESENTLY NSMAT(i5,2x,5(a5,2x))	M) TARGET AREAS	MET BY STRUCTURE
1-5	no_of_targets(is,isa)	i5	number of environmental (presently NSM) target areas met by structure
6-12	<pre>itarg_name(i)</pre>	2x,a5	character ids of the target area #i (i=1, no_of_targets(is,isa))

 1-5	iconv_canal_up_name	a5	name of upstream conveyance canal in WCA delivering water through structure (maximum of 5 characters)
FO	DITIONAL CANALS TRIGGERING CRMAT(i5,10(2x,a5)) (1 recor	d total)	UCTURE
	n_add_can_dep_s(is,isa)	i5	number of additional canals triggering operations of structure
6-12	add_can_dep_id(i)	2x,a5	<pre>names of the additional canal #i (i=1, n_add_can_dep_s(is,isa))</pre>
44. AD	DITIONAL GRID LOCATIONS USED	TO DETERMINING	DISCHARGE
_	n_add_grid_loc_s(is,isa)	free	<pre>number of additional grid locations used in determining discharge</pre>
- NOTE:		ields are repeat	locations used in determining
NOTE:	The following set of two f	ields are repeat (is,isa)	locations used in determining discharge
- - - 45. AD FO	The following set of two fi.e., i=1, n_add_can_dep_s icol_add(i) irow_add(i)	ields are repeat (is,isa) free free FLOWS DIRECTLY U d total)	locations used in determining discharge ed for each additional grid #i, column number of cell #i row number of cell #i SED IN DETERMINING DISCHARGE
- - - 45. AD FO	The following set of two fi.e., i=1, n_add_can_dep_s icol_add(i) irow_add(i)	ields are repeat (is,isa) free free FLOWS DIRECTLY U d total)	locations used in determining discharge ed for each additional grid #i, column number of cell #i row number of cell #i SED IN DETERMINING DISCHARGE number of additional structure flows directly used in
- - - 45. AD FO 	The following set of two fi.e., i=1, n_add_can_dep_s icol_add(i) irow_add(i)	ields are repeat (is,isa) free free FLOWS DIRECTLY U d total)	locations used in determining discharge ed for each additional grid #i, column number of cell #i row number of cell #i SED IN DETERMINING DISCHARGE number of additional structure flows directly used in determining discharge
- - - 45. AD FO 1-5	The following set of two fi.e., i=1, n_add_can_dep_s icol_add(i) irow_add(i)	ields are repeat (is,isa) free free	locations used in determining discharge ed for each additional grid #i, column number of cell #i row number of cell #i

46. FRACTION OF NON REGULATORY COMPONENT OF FLOW TARGET TO ENP TO BE PASSED THROUGH STRUCTURE

NOTE:	The following set of two field i.e., i=1, 2	ls are repeated	for dry and wet seasons,
_	rfcfs355(i)	free	fraction of NON regulatory component of flow target to ENP to be passed through S-333/S-355
_	rfcfs12(i)	free	fraction of NON regulatory component of flow target to ENP to be passed through S-12s
47. FR <i>I</i>	ACTION OF REGULATORY COMPONENT C	F FLOW TARGET T	O ENP TO BE PASSED THROUGH STRUCTURE
NOTE:	The following set of two field	ls are repeated	for dry and wet seasons,
_	i.e., i=1, 2 rfcfs355_reg(i)	free	fraction of Regulatory component of flow target to ENP to be
-	rfcfs12_reg(i)	free	passed through S-333/S-355 fraction of Regulatory component of flow target to ENP to be passed through S-12s
	XIMUM FRACTION OF NON REGULATORY NES B,C,D,E OF WCA3A SCHEDULE FC		CARGET FLOW ALLOWED THROUGH S12S FOR SEASONS
NOTE:	The following field is repeate for dry season, i.e., i=1,4	ed for zones B,C	C,D,E of WCA3A schedule, respectively
-	total_frac_s12(i,1)	free	maximum fraction of NON-regulatory component of target flow allowed through S12s
NOTE:	The following field is repeate for wet season, i.e., i=1,4	ed for Zones B,C	C,D,E of WCA3A schedule, respectively
-	total_frac_s12(i,2)	free	maximum fraction of NON-regulatory component of target flow allowed through S12s
	KIMUM FRACTION OF REGULATORY COMNES B,C,D,E OF WCA3A SCHEDULE FC		T FLOW ALLOWED THROUGH S12S FOR SEASONS
NOTE:	The following field is repeate for dry seasons, i.e., i=1,4	ed for zones B,C	C,D,E of WCA3A schedule, respectively
_	total_frac_s12_reg(i,1)	free	maximum fraction of Regulatory component of target flow allowed through S12s

NOTE:	The following field is repeated for wet seasons, i.e., i=1,4	for Zones B,C,D	O,E of WCA3A schedule, respectively,			
-	total_frac_s12_reg(i,2)	free	maximum fraction of Regulatory component of target flow allowed through S12s			
NOTE:	, , , , , , , , , , , , , , , , , , , ,					
50. FRACTION OF FLOW TARGET TO BE MET BY S12A,S12B,S12C,S12D FOR LOW and HIGH FLOW CONDITIONS-FORMAT(5x,15f6.0)						
1-5	blank	5x				
NOTE:	The following field is repeated for S12A,S12B,S12C,S12D, respectively, i.e., j=1,4					
6-11	ftargs12(1,j,month)	f6.0	fraction of flow target to be met by structure for low flow conditions (< 250cfs)			
NOTE:	The following field is repeated for S12A,S12B,S12C,S12D, respectively, i.e., j=1,4					
36-41	ftargs12(2,j,month)	f6.0	<pre>fractions of flow target by structure (> 250cfs)</pre>			
NOTE:	The following field is repeated for S12A,S12B,S12C,S12D, respectively, i.e., j=1,4					
66-51	ftargs12(3,j,month)	f6.0	fractions of flow target by structure for high flow conditions (flood control mode)			
51. COEFFICIENT FOR REGULATORY PORTION OF FLOW TARGET DICTATED BY EXPERIMENTAL RAINFALL PLAN FOR EACH MONTH-FORMAT(15f6.0) (1 record total)						
NOTE:						
1-6	rfregcf(i)	f6.0	coefficient for regulatory portion of flow target dictated by experimental rainfall plan			
NOTE:	Record 52 is repeated for S12A,S12B,S12C,S12D, i.e., i=1,4					
52. MINIMUM STAGE (FT NGVD) ALLOWED FOR UNCONDITIONAL EMERGENCY OUTFLOW THROUGH S12A, S12B, S12C,S12D FOR EACH MONTH-FORMAT(15f6.0)						

NOTE: The following field is repeated for each month January through December i.e., j=1,12

53. FRACTION OF CAPACITY ALLOWED FOR OUTFLOW FROM S343AB AND S344 FOR EACH MONTH NOTE: The following field is repeated for each month January through December i.e, i=1,12 - frac_capac_s343ab(i) free fraction of capacity allowed for outflow from S343AB and S344 NOTE: Record 54 is repeated for each trigger cell, i.e., i=1,5 54. MAXIMUM ALLOWABLE STAGE AT LOCATION FOR OUTFLOW THROUGH S343AB AND S344 FOR EACH MONTH - no_cells_trig_s12s343(i) free id of cell or number of cell row_s12s343 free column number of cell row_s12s343 free row number of cell row number of cell row_s12s343(i,j) free maximum allowable stage at location for outflow through S-343AB and S344 for each month January through December (j=1,12)	1-6	<pre>rmin_stg_for_outf_s12(i,j)</pre>	f6.0	minimum stage (ft NGVD) allowed for unconditional emergency outflow through specific S12 structure		
December i.e, i=1,12 - frac_capac_s343ab(i) free fraction of capacity allowed for outflow from S343AB and S344 NOTE: Record 54 is repeated for each trigger cell, i.e., i=1,5	53. FR	ACTION OF CAPACITY ALLOWED FOR	OUTFLOW FROM	S343AB AND S344 FOR EACH MONTH		
Outflow from S343AB and S344 NOTE: Record 54 is repeated for each trigger cell, i.e., i=1,5 54. MAXIMUM ALLOWABLE STAGE AT LOCATION FOR OUTFLOW THROUGH S343AB AND S344 FOR EACH MONTH - no_cells_trig_s12s343(i) free id of cell or number of cell col_s12s343 free column number of cell row_s12s343 free row number of cell rmax_stg_s12s343(i,j) free maximum allowable stage at location for outflow through S-343AB and S344 for each month						
54. MAXIMUM ALLOWABLE STAGE AT LOCATION FOR OUTFLOW THROUGH S343AB AND S344 FOR EACH MONTH - no_cells_trig_s12s343(i) free id of cell or number of cell - icol_s12s343 free column number of cell - irow_s12s343 free row number of cell - max_stg_s12s343(i,j) free maximum allowable stage at location for outflow through S-343AB and S344 for each month	-	<pre>frac_capac_s343ab(i)</pre>	free	1 1		
MONTH - no_cells_trig_s12s343(i) free id of cell or number of cell - icol_s12s343 free column number of cell - irow_s12s343 free row number of cell - max_stg_s12s343(i,j) free maximum allowable stage at location for outflow through S-343AB and S344 for each month	NOTE: Record 54 is repeated for each trigger cell, i.e., i=1,5					
- icol_s12s343 free column number of cell - irow_s12s343 free row number of cell - rmax_stg_s12s343(i,j) free maximum allowable stage at location for outflow through S-343AB and S344 for each month						
	-	icol_s12s343 irow_s12s343	free free	column number of cell row number of cell maximum allowable stage at location for outflow through		